

# YAZOO

## BIG WHEEL COMPLIANCE MOWER OWNER'S MANUAL

SV22B-2 PV24B-2

SV22W-2

SV24B-2

SV24W-2

SV26B-2

SV26KI-2

SAFETY SUMMARY

ASSEMBLY

START-UP, OPERATION, AND  
SHUTDOWN


ADJUSTMENTS

PREVENTIVE MAINTENANCE

LONG TERM STORAGE

ILLUSTRATED PARTS LIST

WARRANTY

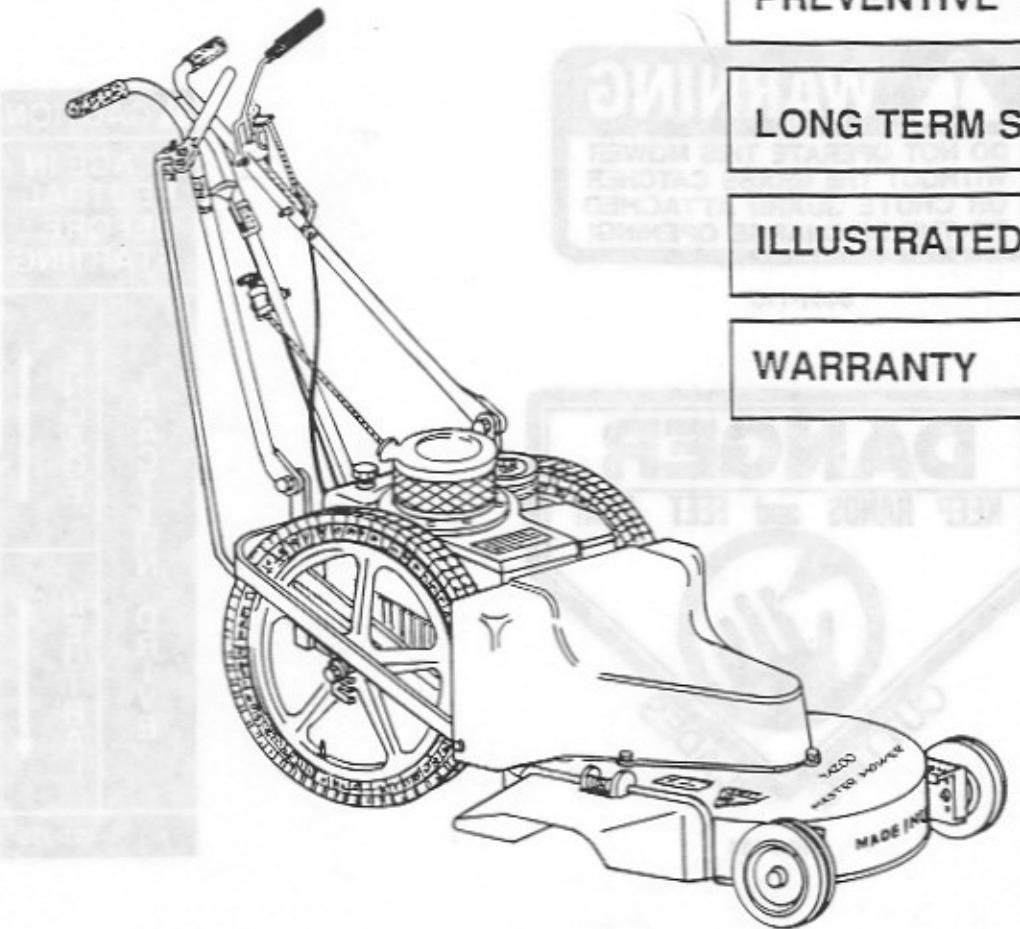

MANUAL NO. 1301-142 (R1 8/92)

## ILLUSTRATED PARTS LIST CON'T.

KEY	PART NO.	DESCRIPTION	QTY
3-1	0703-036	Grip, Handle	2
3-1A	0703-036	Grip, Handle SV22B-2, SV24B-2	2
3-2	1401-010	Nut, 1/4"- 20	1
3-3	2301-003	Washer, 1/4" Lock	1
3-4	0303-004	Cap, Tube 7/8"	1
3-5	0801-551S	Handle, Assy. SV22B-2, SV22W-2	1
3-5A	0801-552S	Handle, Assy. SV24B-2, SV24W-2	1
3-5B	0801-553S	Handle, Assy. SV26B-2, SV26KI	1
3-5C	0801-552P	Handle, Assy. PV24B-2	1
3-6	1401-021	Nut, 5/16" x 18 Center Lock	1
3-7	2301-004	Washer, 5/16" Lock	1
3-8	0309-020	Clip	2
3-9	0209-120	Bolt 5/16"- 18 x 1 1/4"	1
3-10	2301-021	Washer, 5/16" Flat	1
3-11	1401-021	Nut, 5/16" - 18 Center Lock	2
3-12	0209-120	Bolt 5/16"- 18 x 1 1/4"	2
3-13	0705-034	Guide, Rope	2
3-14	0209-050	Bolt, 1/4" x 2"	1
3-15	0307-027	Clamp, Cable SV22B-2	1
3-16	1901-229	Screw, #10 - 24 x 1/2"	2
3-17	1923-025	Switch, SDbL. Pole	1
3-18	1916-183	Spring	1
3-19	2301-001	Washer, Lock 3/16"	2
3-20	1401-001	Nut, 3/16" USS	2
3-21	1918-007	Strap, Drag flap hanger	2
3-21A	1918-008	Strap, Drag flap hanger SV22B-2	2
3-22	0303-021	Cap, Drag Flap	2
3-23	1808-177	Rod, Drg. Flap SV22B-2, SV22W-2	1
3-23A	1808-178	Rod, Drg. Flap SV24B-2, SV24W-2	1
		PV24B-2	
3-23B	1808-182	Rod, Drg. Flap SV26B-2, SV26KI-2	1
3-24	0609-012	Flap, Drg. SV22B-2, SV22W-2	1
3-24A	0609-013	Flap, Drg. SV24B-2, SV24W-2, PV24B-2	1
3-24B	0609-014	Flap, Drg. SV26B-2, SV26, KI-2	1
3-25	0209-528	Bolt, 1/2"x 2 1/2"	2
3-26	2302-023	Wheel, Front	2
3-27	1401-050	Nut, 1/2"	2
3-28	1401-071	Nut 5/8"	1
3-29	2301-010	Washer, 5/8" Lock	1
3-30	2301-096	Washer, Concave	1
3-31	0206-622	Blade, SV22B-2, SV22W-2	1

ILLUSTRATED PARTS LIST CON'T.

KEY	PART NO.	DESCRIPTION	QTY
3-31A	0206-624	Blade, SV24B-2, SV24W-2, PV24B-2	1
3-31B	0206-626	Blade, SV26B-2, SV26KI-2	1
3-32	1906-021	Shield, Hub	1
3-33	0209-114	Bolt, 5/16"- 18 x 1	6
3-34	2301-008	Washer, 1/2" Lock	2
3-35	1401-050	Nut, 1/2"	2
3-36	0605-480	Frame, WLDT SV22B-2	1
3-36A	0605-465	Frame, WLDT SV22W-2	1
3-36B	0605-479	Frame, WLDT SV24B-2	1
3-36C	0605-479	Frame, WLDT SV24W-2	1
3-36D	0605-467	Frame, WLDT SV26B-2, SV2610-2	1
3-36E	0605-478	Frame, WLDT PV24B-2	1
3-37	1401-031	Nut, 3/8"- 16 Center Lock	1
3-38	2301-021	Washer, 3/8" Flat	1
3-39	1913-088	Spacer, Brake Band	1
3-40	2301-021	Washer	1
3-41	1604-086	Pin, 3/32" x 1/2"	1
3-42	0306-013	Guard, Chute SV22	1
3-42A	0306-012	Guard, Chute SV24, SV26	1
3-43	1916-036	Spring, Chute	1
3-44	0303-021	Cap, Drag Flap	1
3-45	0101-163	Adapter, Blade	1
3-46	0204-060	Bearing, Hub	1
3-47	1604-043	Pin, Clevis	1
3-48	0806-234	Housing, Hub	1
3-49	2301-004	Washer, 5/16" Lock	6
3-50	1401-020	Nut, 5/16"	6
3-51	1904-295	Shaft, Hub	1
3-52	0204-060	Bearing, Hub	1
3-53	1806-147	Ring, Snap	1
3-54	1401-030	Nut, 3/8" - 16	1
3-55	2301-006	Washer, 3/8" Lock	1
3-56	2301-021	Washer, 3/8" x 1 1/4" Flat	1
3-57	1608-095	Pulley, Idler	1
3-58	1913-077	Spacer, Idler Pulley	1
3-59	2301-021	Washer, 3/8" x 1 1/4" Flat	1
3-60	0209-331	Bolt, 3/8"- 16 x 1 3/4"	1
3-61	0102-066	Arm, Idler Assy.	1
3-62	1916-183	Spring	1

ILLUSTRATED PARTS LIST CON'T.

KEY	YTD	PART NO.	DESCRIPTION	ON TRAY	QTY	KEY
3-63	S	1806-147	Ring, Snap	801-0050	1	1-1
3-64	T	1913-078	Spacer, Pulley	8050	1	2-1
3-65	T	1913-088	Spacer, Brake Band	8050	1	
3-66	T	2301-010	Washer, 3/8" Flat	8050	1	A8-1
3-67	T	1608-163	Pulley, Spindle	8050	1	88-1
3-68	T	1608-118	Pulley, Brake Drum	8050	1	98-1
3-69	T	1102-023	Key, 3/16" x 3/16" x 2 1/8"	8050	1	98-1
3-70	T	2301-010	Washer, 5/8" Lock	800-1001	1	8-1
3-71	T	1401-071	Nut, 5/8" - 18	810-1011	1	11-1
3-72	T	0217-027	Brake, Band	800-1011	1	A1-1
3-73	T	2301-021	Washer, 3/8" Flat	810-1011	1	81-1
3-74	T	1401-031	Nut, 3/8" - 16 Center Lock	810-1011	1	94-1
3-75	T	2301-021	Washer, 3/8" Flat	810-1011	1	91-1
3-76	T	1401-030	Nut, 3/8" - 16	811-0081	1	8-1
3-77	T	0209-357	Bolt, 3/8" - 16 x 2 3/4" TAP	TA1-0081	1	A2-1
3-78	T	0808-029	Hub, Assembly	TA1-0081	1	88-1
3-79	T	1102-013	Key, Woodruff	100-1063	1	3-1
3-80	T	1401-031	Nut 3/8" - 16 Center Lock	800-1001	1	7-1
3-81	T	1302-067	Mount-Eng. Plate (SV24B-2)	800-1001	1	8-1
3-81A	T	1302-068	Mount-Eng. Plate (SV24W-2)	800-1001	1	A8-1
3-82	T	0209-114	Bolt, 5/16" - 18 x 1"	801-0031	4	
3-83	T	2301-021	Washer, 5/16" Flat	801-0031	4	8-1
3-84	T	2301-004	Washer, 5/16" Lock	810-0081	4	A8-1
3-85	T	1401-020	Nut, 5/16" - 18	810-0081	4	88-1
3-86	T	1401-020	Nut, 5/16" - 18 SV22B-2, SV22W-2	810-0081	4	98-1
3-87	T	2301-004	Washer, 5/16" Lock SV22B-2, SV22W-2	810-0081	4	98-1
3-88	T	2301-004	Washer, 5/16" Lock SV22B-2, SV22W-2	8050	4	01-1
3-89	T	1401-020	Nut, 5/16" - 18 SV22B-2 SV22W-2	8050	4	A81-1
3-90	T	1811-034	Rubber, Isolator SV22B-2, SV22W-2	8050	4	801-1
3-91	T	0209-108	Bolt, 5/16" - 18 x 3/4"	8050	4	301-1
3-92	T	0214-502	Bracket, Eng. Plate SV22B-2, SV22W-2	8050	1	001-1
3-93	T	1401-020	Nut, 5/16" - 18 SV22B-2 SV22W-2	800-1001	4	11-1
3-94	T	2301-004	Washer, 5/16" Lock SV22B-2	800-1001	4	81-1
			SV22W-2	800-1001		
3-95	T	1302-069	Mount, Eng. Plate SV22B-2	800-1001	1	81-1
3-96	T	0214-502	Bracket, Eng. Plate SV22B-2, SV22W-2	800-1001	1	81-1
3-97	T	1811-033	Rubber, Isolator SV22B-2, SV22W-2	800-1001	1	81-1
3-98	T	1811-033	Rubber, Isolator SV22B-2, SV22W-2	800-1001	2	11-1
3-99	T	2301-021	Washer, 3/8" Flat	805-1063	1	81-1

### ILLUSTRATED PARTS LIST CON'T.

KEY	YTD	PART NO.	DESCRIPTION	ON TRAG	QTY	KEY
4-1		0209-126	Bolt, 5/16"- 18 x 1 1/2"	141-9081	2	68-8
4-2		E258	Engine, Wisconsin 5 H.P.	810-6181	1	48-8
			SV22W-2, SV24W-2	880-6181		88-8
4-2A		E263	Engine, Briggs I.C. 5 H.P. SV22B-2	170-1083	1	88-8
4-2B		E263	Engine, Briggs SV24B-2, PV24B-2	171-8081	1	78-8
4-2C		E265	Engine, Kawasaki 9 H.P. SV26KI-2	171-8081	1	88-8
4-2D		E266	Engine, Briggs 8.5 H.P. SV26B-2	180-9011	1	88-8
4-3		1604-086	Pin, Cotter 3/32" x 1/2"	170-1083	1	0T-8
4-4		1101-019	Keeper,, Assy. Bel SV22B-2	170-1041	1	1T-8
4-4A		1101-020	Keeper, Assy. Belt SV22W-2	170-1083	1	ST-8
4-4B		1101-018	Keeper, Assy. Bel SV24B-2	170-1083	1	CT-8
4-4C		1101-021	Keeper, Assy. Belt SV24W-2	170-1083	1	AT-8
4-4D		1101-022	Keeper, Assy. Belt SV26B-2, SV26KI-2	170-1083	1	BT-8
4-5		1808-149	Rod, Control SV22B-2, SV22W-2	180-1041	1	BT-8
4-5A		1808-147	Rod, Control SV24B-2, SV24W-2	180-8080	1	TT-8
4-5B		1808-312	Rod, Control SV26B-2, SV26KI-2	180-8080	1	BT-8
4-6		2301-004	Washer, 5/16" Lock	180-9011	1	BT-8
4-7		1401-020	Nut, 5/16" - 18	180-1041	1	08-8
4-8		1102-004	Key, Woodruff SV22W-2, SV24W-2	180-9081	1	18-8
4-8A		1102-002	Key, 1/4" x 1/4" x 1" SV26B-2	180-9081	1	AT-8
			SV26KI-2, SV22B-2, SV24B-2	170-8080		88-8
4-9		1608-165	Pulley, Engine SV22B-2	180-1083	1	88-8
4-9A		1608-411	Pulley, Engine SV22W-2	180-1083	1	48-8
4-9B		1608-412	Pulley, Engine SV24W-2	180-1041	1	88-8
4-9C		1608-413	Pulley, Engine SV26B-2, SV26KI-2	180-1041	1	88-8
4-9D		1608-108	Pulley, Engine SV24B-2	180-1083	1	78-8
4-10		0205-540	Belt, Blade SV22B-2	180-1083	1	88-8
4-10A		0205-542	Belt, Blade SV22W-2	180-1041	1	88-8
4-10B		0205-058	Belt, Blade SV24W-2	180-1181	1	08-8
4-10C		0205-541	Belt, Blade SV26B-2, SV26KI-2	180-8080	1	78-8
4-10D		0205-539	Belt, Blade SV24B-2	180-1180	1	88-8
4-11		1901-009	Screw, Set 5/16" - 18 x 5/16"	180-1041	1	88-8
4-12		1901-009	Screw, Set 5/16" - 18 X 5/16"	180-1083	1	48-8
4-13		1401-020	Nut, 5/16"		1	
4-14		2501-027	Yoke	180-9081	1	88-8
4-15		1604-086	Pin, Cotter 3/32" x 1/2"	180-8180	1	88-8
4-16		1604-013	Pin, Rivet 5/16" x 1 1/4"	180-1181	1	78-8
4-17		1913-140	Spacer	180-1181	1	88-8
4-18		2301-296	Washer, 3/16" Flat	180-1083	1	88-8

**ILLUSTRATED PARTS LIST CON'T.**

KEY	PART NO.	DESCRIPTION	QTY
4-19	1401-099	Nut #10 - 24 Center Lock	1
4-20	1401-001	Nut #10 - 24	1
4-21	1201-015	Lever, FSP Engagement	1
4-22	2301-004	Washer, 5/16" Lock	2
4-23	1401-020	Nut 5/16"- 18	2
4-24	1401-001	Nut, #10 HHMS	2
4-25	2301-001	Washer, #10 Lock	2
4-26	1808-089	Rod, Engaging SV22B-2, SV22W-2	1
4-26A	1808-141	Rod, Engaging SV24B-2, SV24W-2 SV26B-2, SV26KI-2	1
4-27	1604-002	Pin, Cotter 3/32" x 1"	1
4-28	1604-086	Pin, Cotter 3/32" x 1/2"	1
4-29	0301-086	Cable, Throttle Control SV22B-2	1
4-29A	0301-120	Cable, Throttle Control SV24B-2	1
4-29B	0301-064	Cable, Throttle Control SV26B-2	1
4-29C	0301-073	Cable, Throttle Control SV22W-2	1
4-29D	0301-074	Cable, Throttle Control SV24W-2	1
4-29E	0301-075	Cable, Throttle Control SV26KI-2	1
4-30	2301-001	Washer, #10 Lock	2
4-31	1401-001	Nut, #10 HHMS	2
4-32	1401-020	Nut, 5/16"- 18	1
4-33	2501-027	Yoke, Rod	1
4-34	1604-086	Pin, Cotter 3/32" x 1/2"	1
4-35	1604-013	Pin, Rivet	1
4-36	0208-007	Bolt, #10 - 24 x 1 1/4"	2
4-37	0801-559	Handle	1
4-38	2301-001	Washer, 3/16" Lock	1
4-M	1401-001	Nut, #10 - 24	1
4-40	0208-035	Bolt, #10 - 24 x 2 1/4"	1
4-41	0208-035	Bolt, #10 - 24 X 2 1/4"	1
4-42	0301-063	Control, Brake Blade	1
4-43	0305-025	Chain, FSP	1
4-44	0315-010	Cup, Bearing Wheel	2
4-45	2003-006	Tire, Pneumatic SV22B-2, SV22W-2	2
4-45A	2003-010	Tire, Pneumatic SV24B-2, SV24W-2 SV26B-2, SV26KI-2	2
4-46	2005-010	Tube, Inner SV22B-2, SV22W-2	2
4-46A	2005-010	Tube, Inner SV24B-2, SV24W-2 SV26B-2, SV26KI-2	2
4-47	2302-100	Wheel, Rear SV22B-2, SV22W-2	2
4-47A	2302-099	Wheel, Rear SV24B-2, SV24W-2 SV26B-2, SV26KI-2	2

**ILLUSTRATED PARTS LIST CON'T.**

KEY	PART NO.	DESCRIPTION	QTY
4-48	2301-003	Washer, 1/4" Lock	3
4-49	1401-010	Nut, 1/4" - 20	3
4-50	1401-020	Nut, 5/16"- 18	1
4-51	2301-004	Washer, 5/16" Lock	1
4-52	1901-011	Screw, Set	1
4-53	1401-021	Nut, 5/16"- 18 Lock	2
4-54	2301-021	Washer, 5/16" Flat	2
4-55	2301-020	Washer, Flat	2
4-56	0214-178	Bracket, Cable End Mounting	1
4-57	1917-012	Spocket, FSP	1
4-58	1901-011	Screw, Set	1
4-59	0806-033	Housing, Fric. Shaft Assy.	1
4-60	0209-108	Bolt, 5/16" x 3/4"	2
4-61	1901-009	Screw, Set 5/16" x 5/16"	1
4-62	1901-009	Screw, Set 5/16" x 5/16"	1
4-63	0204-045	Bearing, Water Pump	1
4-64	0209-108	Bolt, 5/16" - 18 x 3/4"	1
4-65	1608-046	Pulley, Friction	1
4-65A	1608-166	Pulley, Friction	1
		SV22B-2, SV22W-2	1
4-66	0205-426	Belt, FSP SV22B-2, SV22W-2	1
		SV24B-2, SV24W-2	1
4-66A	0205-426	Belt FSP SV26B-2, SV26KI-2	1
4-67	0212-025	Bolt, Shoulder 7/16"	2
4-68	2301-095	Washer, Flat 7/16" x 1 1/2"	2
4-69	1604-014	Pin, Roll 3/16" x 1 1/4"	1
4-70	1604-014	Pin, Roll 3/16" x 1 1/4"	1
4-71	1803-008	Rachet, LH.	1
4-72	1913-095	Spacer, FSP End	1
4-73	0405-004	Driver	1
4-74	0102-003	Arm, Pivot Friction	1
4-75	0204-020	Bearing, Hub	1
4-76	0311-002	Collar, Seat	1
4-77	1901-009	Screw, Set 5/16" x 5/16"	1
4-78	1904-068	Shaft, FSP SV22B-2, SV22W-2	1
4-78A	1904-069	Shaft, FSP SV24B-2, SV24W-2	1
4-78B	1904-071	Shaft, FSP SV26B-2, SV26KI-2	1
4-79	1901-011	Screw, Set 5/16" x 5/16" NF	1
4-80	1917-014	Spocket 36 Tooth	1
4-81	0311-002	Collar, set	1
4-82	1901-009	Screw, Set 5/16" x 5/16"	2

**ILLUSTRATED PARTS LIST CON'T.**

KEY	PART NO.	DESCRIPTION	QTY
4-83	0204-020	Bearing, Hub	1
4-84	1604-086	Pin, Cotter 3/32"x 1/2"	1
4-85	0102-003	Arm, Pivot Friction	1
4-86	1604-014	Pin, Roll 3/16" x 1 1/4"	1
4-87	1604-014	Pin, Roll 3/16" x 1 1/4"	1
4-88	1803-007	Ratchet R.H.	1
4-89	0405-004	Driver	1
4-90	1604-007	Pin, Spine	2
4-91	1913-095	Spacer, End	1
4-92	1916-013	Spring, Ratchet	2
4-93	1604-013	Pin, Rivet	1
4-94	2501-027	Yoke, Rod	1
4-95	1401-020	Nut, 5/16"- 18	1
4-96	1808-149	Rod, Control SV22B-2, SV22W-2	1
4-96A	1808-147	Rod, Control SV24B-2, SV24W-2	1
4-96B	1808-312	Rod, Control SV26B-2, SV26KI-2	1
4-97	0209-032	Bolt, 1/4" x 1 1/4" NF	2
4-98	2301-020	Washer, 1/4" Flat	2
4-99	0209-021	Bolt, 1/4" - 20 x 3/4"	2
4-100	0804-032	Hood, Plastic SV22B-2, SV22W-2	1
4-100A	0804-033	Hood, Plastic SV24B-2, SV24W-2	1
4-100B	0804-034	Hood, Plastic SV26B-2, SV26KI-2	1
4-101	1401-010	Nut, 1/4"- 20	2
4-102	2301-003	Washer, 1/4" Lock	2
4-103	0209-135	Bolt, 5/16"- 18 x 1 3/4"	2
4-104	1604-086	Pin, Cotter 3/32"x 1/2"	1
4-105	2301-020	Washer, 1/4" Flat	3
4-106	2301-021	Washer, 5/16" Flat	2
4-107	2301-004	Washer, 5/16" Lock	2
4-108	2301-021	Washer, 5/16" Flat	2
4-109	2301-021	Washer, 5/16" Flat	2
4-110	0215-026	Bushing, Nylon 5/8" x 1/2"	1
4-111	0209-323	Bolt 3/8" - 16 x 1" Self Tapping Type "T"	1
4-111A	0209-832	Bolt, 8mm x 25mm SV26KI-2	4
4-112	2301-022	Washer, 3/8" Flat	2
4-113	2301-022	Washer, 3/8" Flat	2
4-114	0315-010	Cup, Bearing Wheel	2
4-115	2301-022	Washer, 3/8" Flat	2
4-116	1105-013	Kit Mag. Wheel	2

**ILLUSTRATED PARTS LIST CON'T.**

KEY	PART NO.	DESCRIPTION	QTY
4-117	0209-114	Bolt, 5/16" - 18 x 1"	2
4-118	2301-021	Washer, 5/16" Flat	2
4-119	2301-004	Washer, 5/16" Lock	2
4-120	1401-020	Nut, 5/16" - 18	2
4-121	0214-191	Bracket Fric. Assy. SV22B-2	1
		SV22W-2	
4-121A	0214-192	Bra Fric. Assy. Sv24B-2	1
		SV24W-2	
4-121 B	0214-193	Bracket Fric. Assy. SV26B-2	1
		SV26KI-2	
4-122	1401-001	Nut, #10 - 24	1
4-123	0408-008	Deflector, Exhaust Gas	1
4-124	1901-235	Screw, #10 x 5/8" Self Tapping	3
		SV26KI-2	
4-125	0408-009	Deflector	1
4-126	1913-301	Spacer, SV26KI-2	3
4-127	2301-006	Washer, 3/8" Lock	2
4-128	2301-021	Washer, 5/16" Flat	2
4-129	0307-027	Clamp, Cable SV22B-2	1
4-130	0307-027	Clamp, Cable SV24B-2	2
4-131	1907-015	Shim, Frk. Drv. Hsg SV22B-2, SV22W-2	1
4-132	1918-025	Strap, Head SV24B-2	1
4-133	1901-234	Screw, #10 x 5/16" Self Tapping	1
		SV26KI-2	
4-134	0209-108	Bolt, 5/16" -18 x 3/4"	1
4-135	1401-021	Nut, 5/16" -18 Lock	1
		SV26KI-2	
		Washer, 5/16" Lock	
		Washer, 5/16" Flat	
		Washer, 3/8" Flat	
		Bumper, Nylon 2 1/8" x 1 1/2"	
		Bolt 5/16" - 18 x 1" Self	
		Tabbed Tube "T"	
		Bar, 8mm x 5mm SAEK-5	
		Washer, 3/16" Flat	
		Washer, 3/8" Flat	
		Cap, Beaded Washer	
		Washer, 3/8" Flat	
		Flat Head Washer	
		1108-013	

ILLUSTRATED PARTS LIST CON'T.

KEY	PART NO.	DESCRIPTION	QTY
5-1	0401-111	Decal, Danger Cutting Blades	1
5-2	0401-110	Decal, Warning Chute	1
5-3	0401-118	Decal, Made In USA	1
5-4	0401-220	Decal, O.P.E.I. Safety	1
5-5	0401-387	Decal, Master Mower	1
5-6	0401-376	Decal, Traction Drive Control	1
5-7	0401-377	Decal, Blade Brake Control	1
5-8A	0401-289	Decal, 22"	1
5-8B	0401-390	Decal, 24"	1
5-8C	0401-391	Decal, 26"	1
5-9	0401-112	Decal, Serial Plate	1

PV24

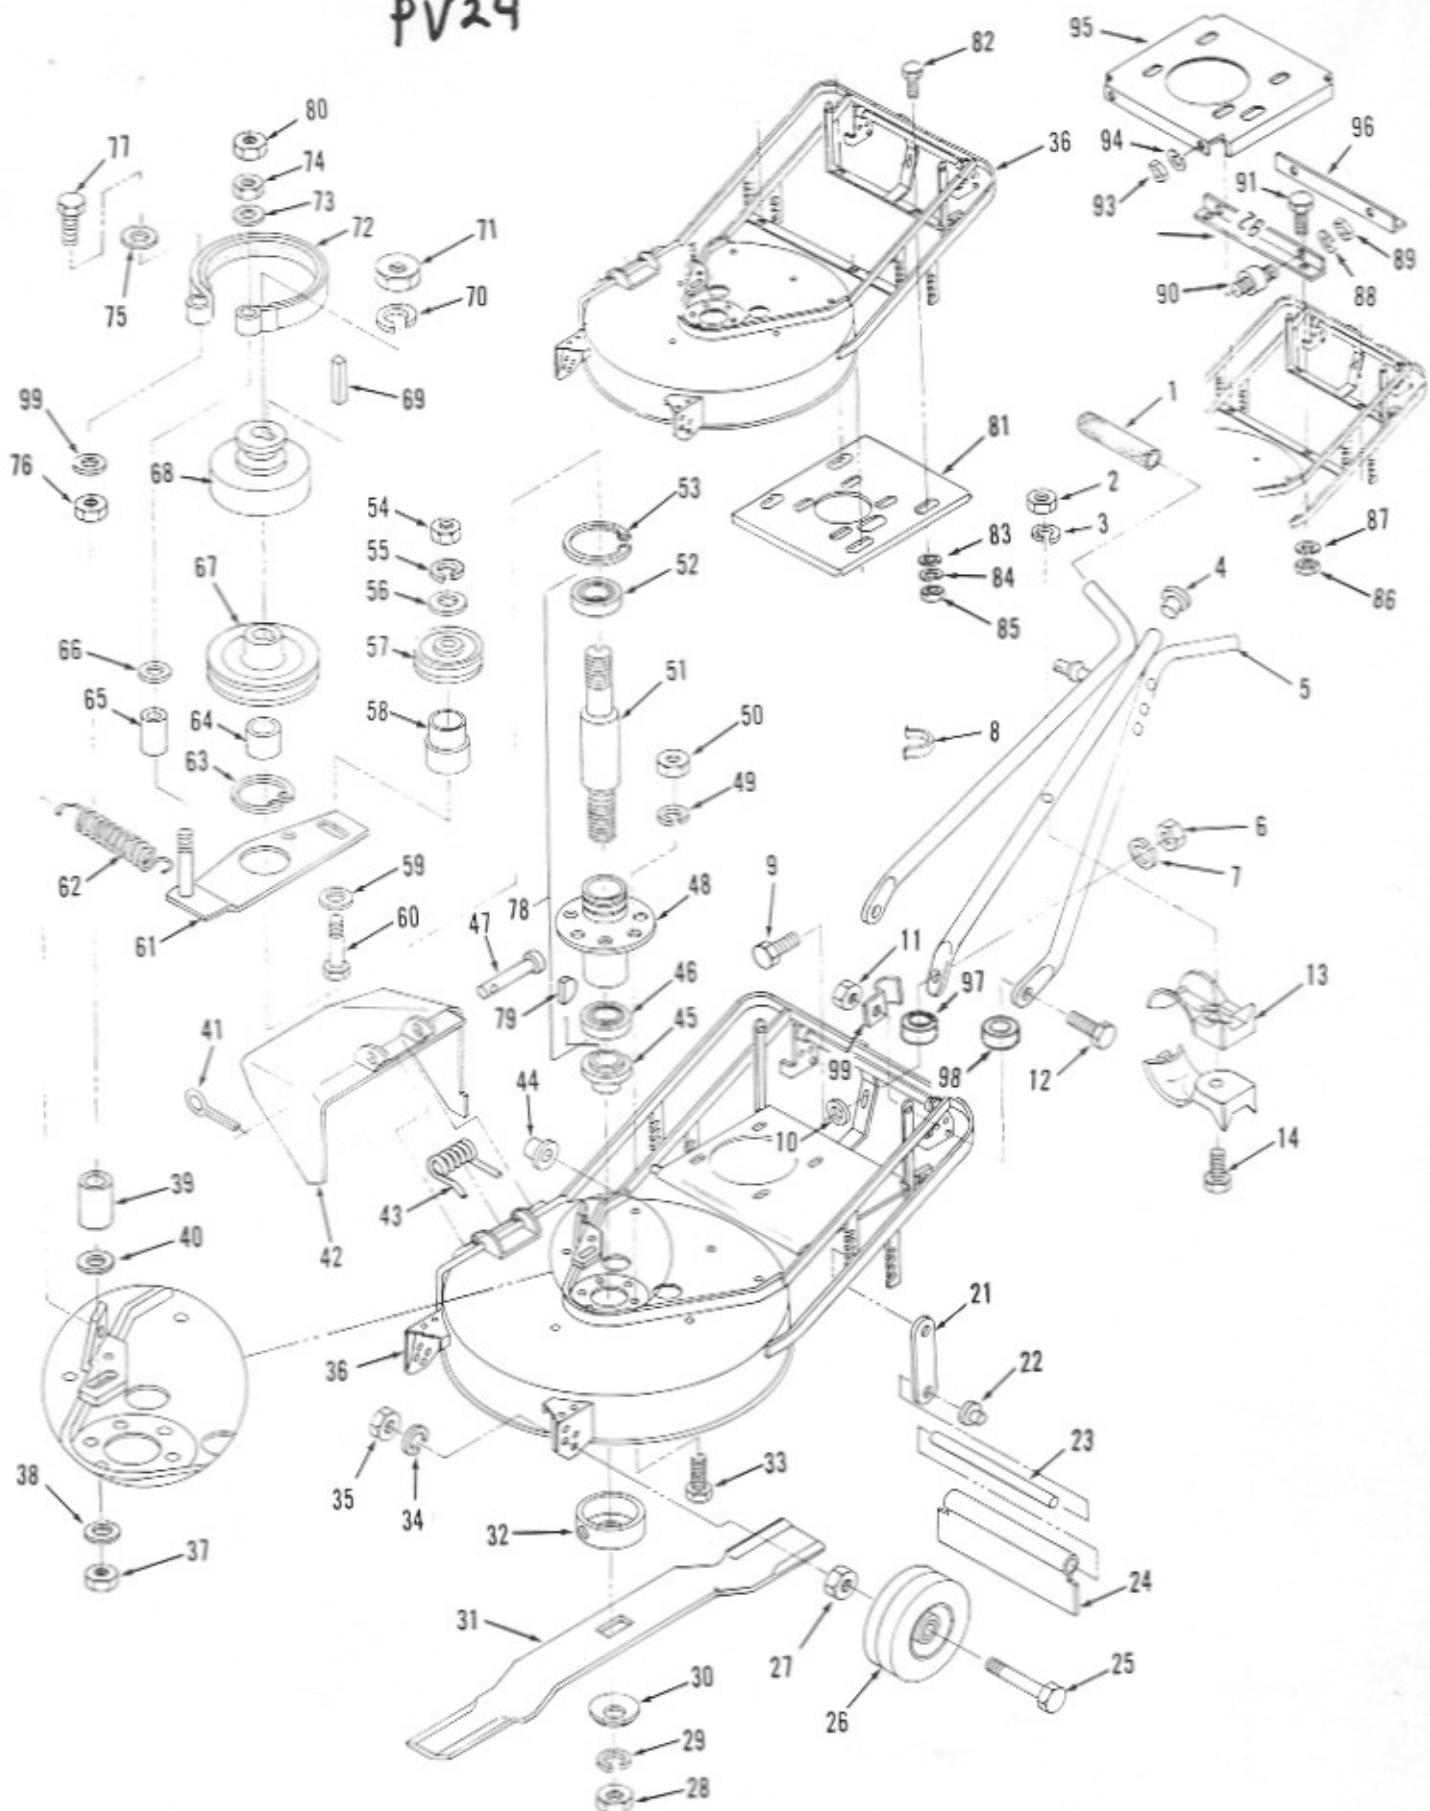


FIGURE #3 EXPLODED VIEW

PV24

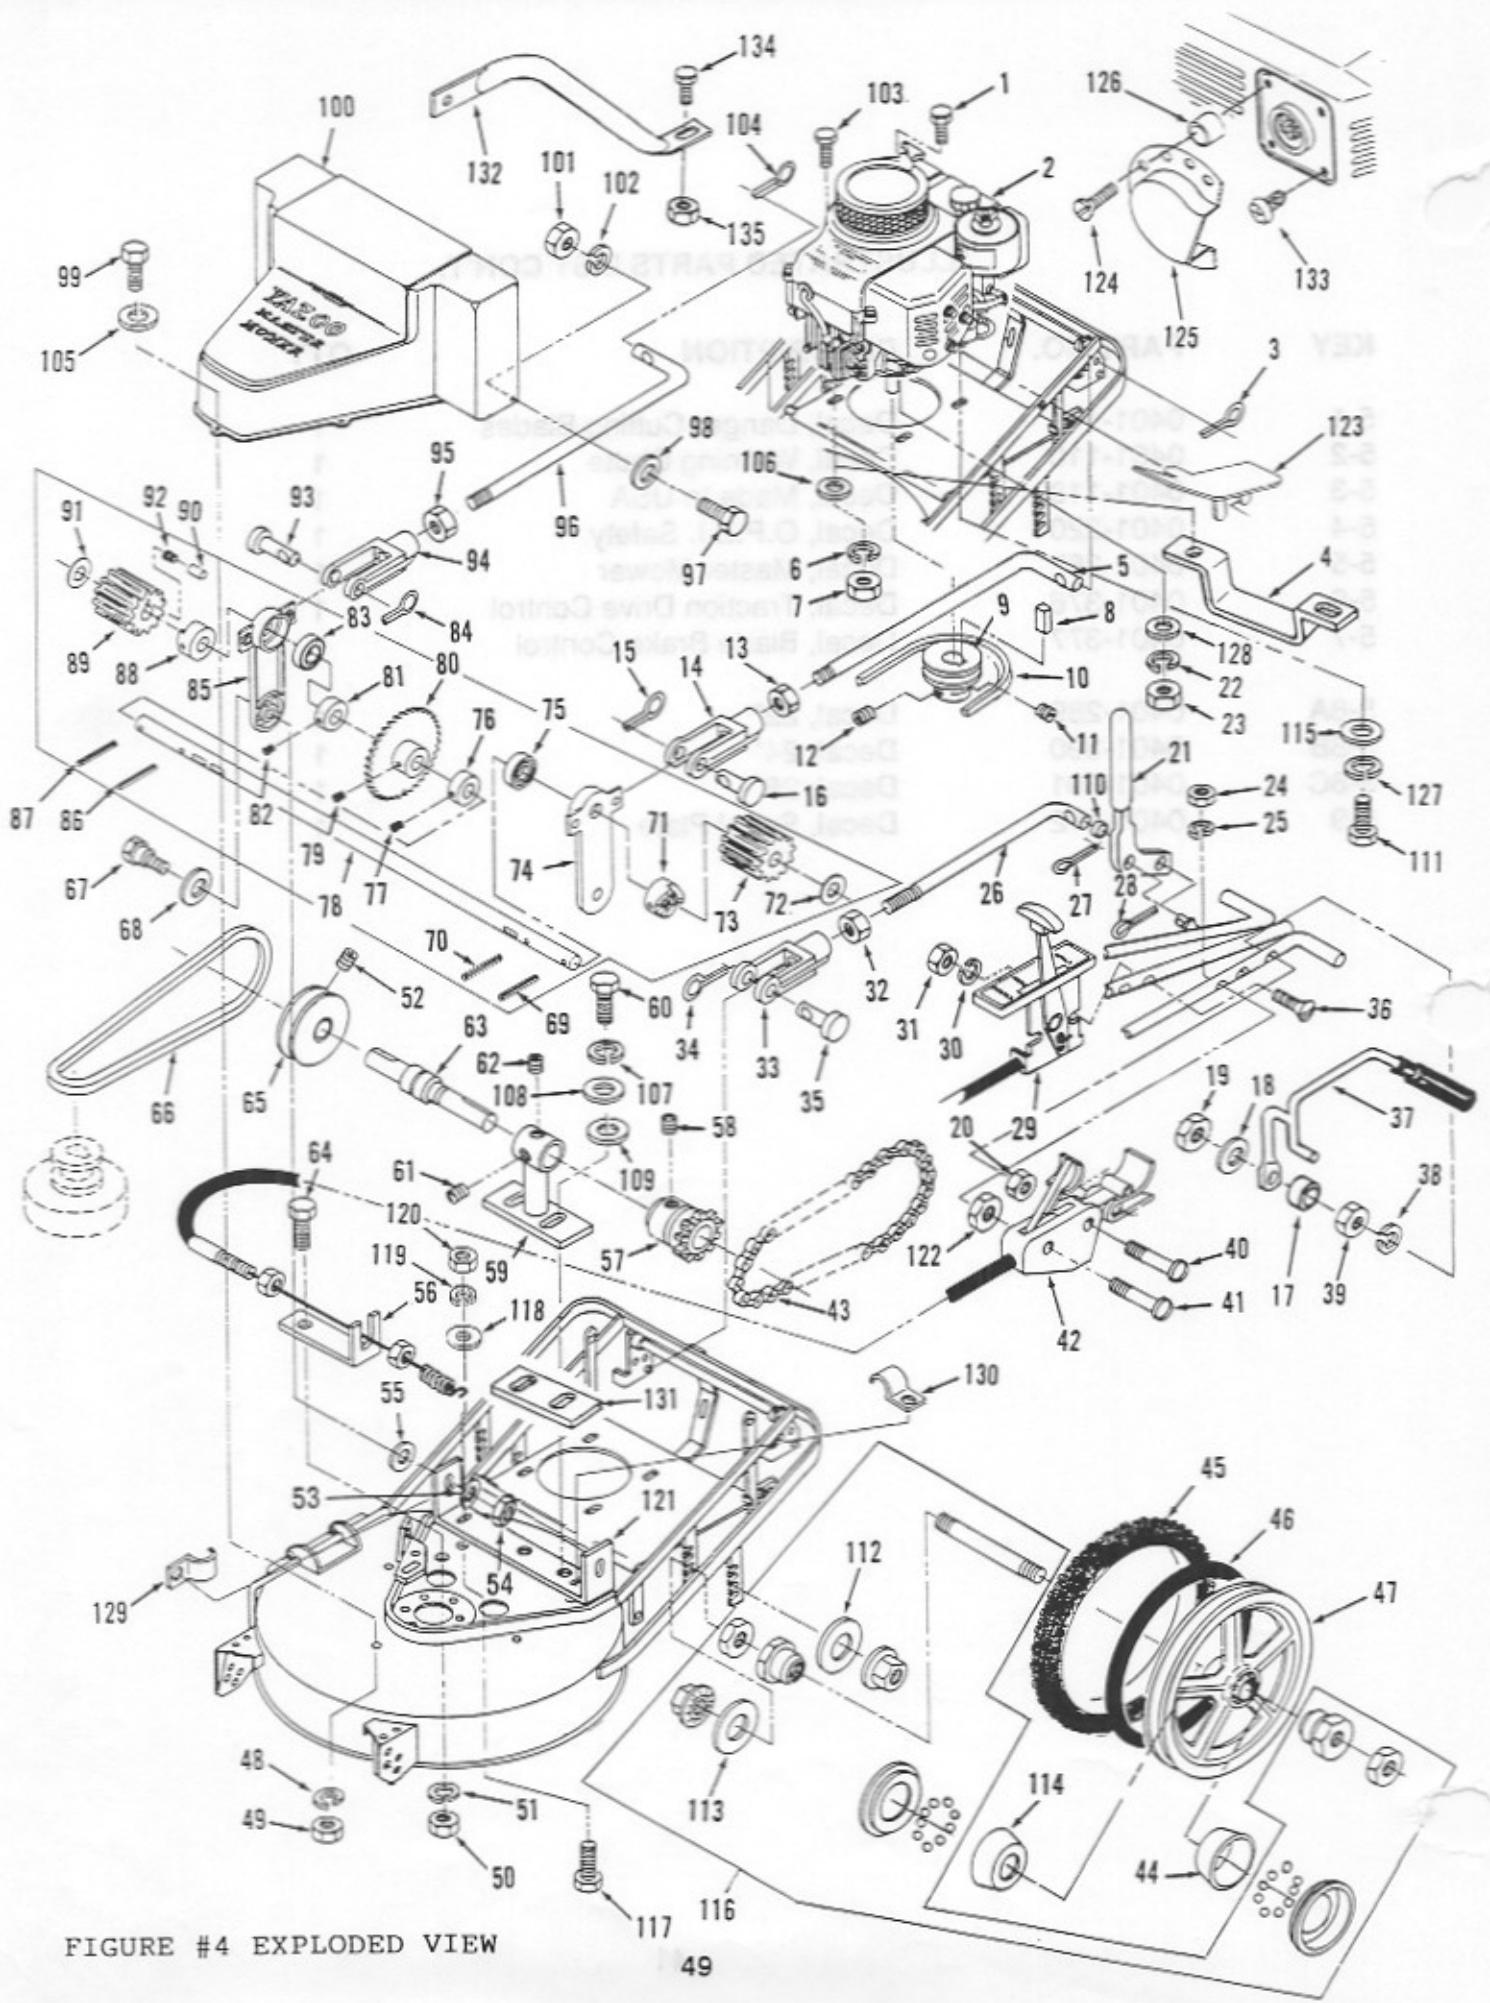


FIGURE #4 EXPLODED VIEW

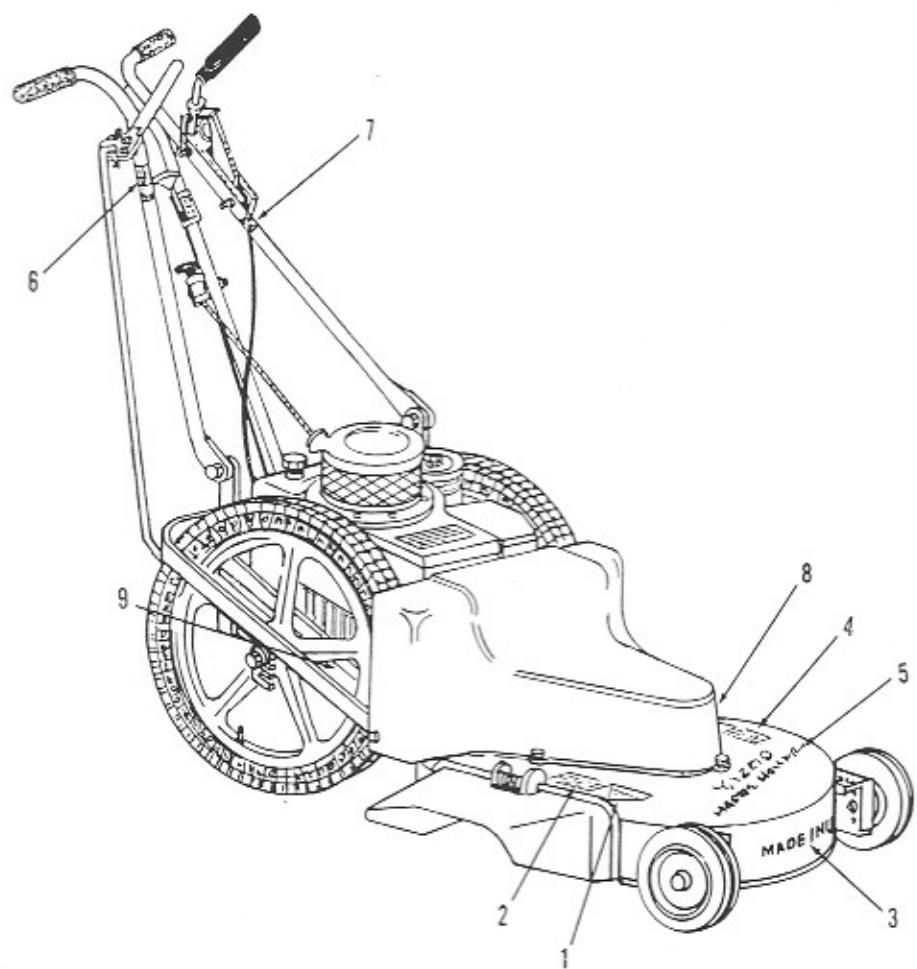


FIGURE #5 DECAL PLACEMENT

**YAZOO MANUFACTURING CO.**

JACKSON, MS 39216

MODEL NO.

SERIAL NO.

C

AS MANUFACTURED THIS MOWER MEETS  
CPSC BLADE SAFETY REQUIREMENTS

0401-112



0401-220

**BLADE  
BRAKE  
CONTROL**

401-377

**WARNING**

DO NOT OPERATE THIS MOWER  
WITHOUT THE GRASS CATCHER  
OR CHUTE GUARD ATTACHED  
TO THE DISCHARGE OPENING!

0401-110

**CAUTION**

PLACE IN  
NEUTRAL  
BEFORE  
STARTING



401-376

**DANGER**

KEEP HANDS and FEET AWAY



CUTTING BLADES

0401-111